TRAMONTINA

HOW TO USE A PRESSURE COOKER STEAMER BASKET

Pressure Cooker is also a great product for steaming vegetables. In this How-To, you will learn how to use the Steamer Basket that either comes with your pressure cooker or can be bought online at www.tramontina.com.au.

In the market, there is a variety of steamer basket models. All these models follow the same basic ways of working and only vary in shape, capacity and material. If you have a different steamer basket insert and from another brand, please refer to their use manual for further instructions.

STEAMER PARTS

TRIVET INSERT



STEAMER PLATE

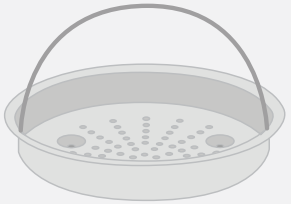

STEAMER BASKET

HOW TO USE

- Add water to your pressure cooker. The level of the water should not be higher than the Trivet Insert level.

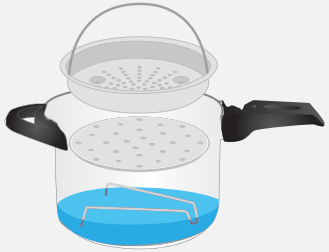

- Add the Trivet Insert to the pressure cooker body as per picture beside.
- There are different steaming plates for different models of pressure cookers. Simply place one or both of your steamer basket or steamer plate on laying on top of the trivet insert.

- Add vegetables and steam/cook for the desired time or as instructed in the recipe method.

For instructions and safety procedures on using Pressure Cookers please refer to the User Manual enclosed in the product's box or download it from Tramontina Website - www.tramontina.com.au. All Pressure Cookers work with the basic principles but may vary in pressure setting and pressure release methods. Always make sure to refer to the correct User Manual made specific to your Pressure Cooker model.